

- \triangle WARNING: CHOKING HAZARD Small Parts. Not for children under the age of 3 years.
- △ CAUTION: Keep hands, face, hair and clothing away from all moving parts.

Battery Information:


- Be sure to insert the batteries correctly and always follow the toy and battery manufacturers'instructions.
- Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Only batteries of the same or equivalent type recommended should be used.
- Always remove weak or dead batteries from the product; do not short-circuit supply terminals.
- Insert batteries with correct polarity (+/-) as shown.

Important Tips


 2 Alkaline batteries AA (LR6) are recommended.


- Rechargeable batteries are not recommended.
- Remove rechargeable batteries from toy before charging; they must be charged only under adult supervision.
- Non-rechargeable batteries must not be recharged.
- Keep components free of dust; do not immerse or use in water.
- Do not dispose of batteries in a fire; they could leak or explode and cause injury.
- Remove all batteries if the toy will not be used for a long period of time.
- Do not put rods smaller than 2 inches in any openings of the motor; they will damage the motor, and cannot be removed.


How to Insert

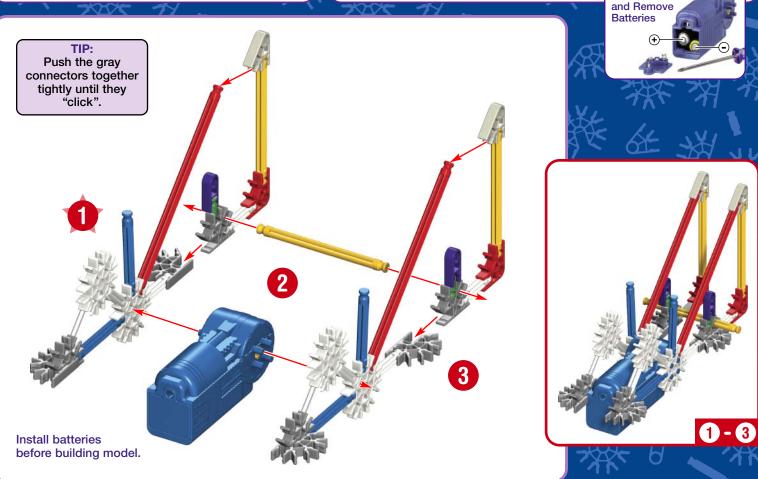





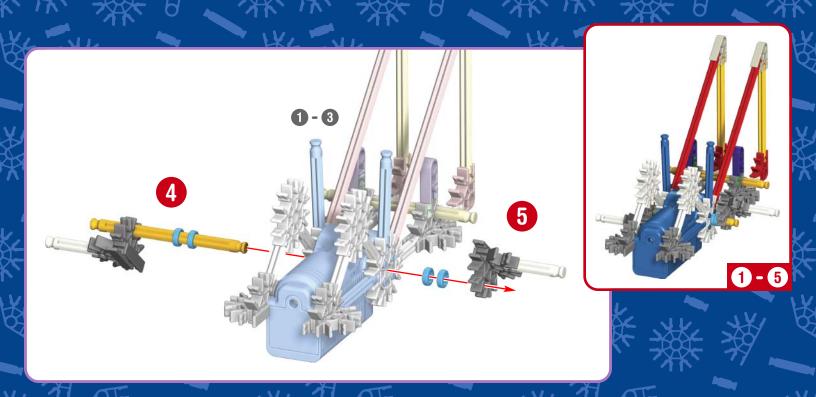

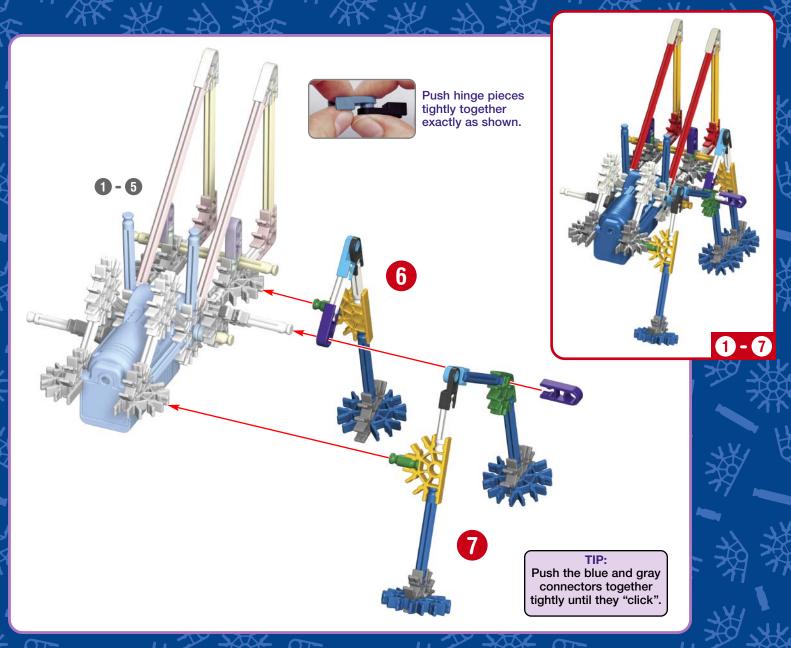

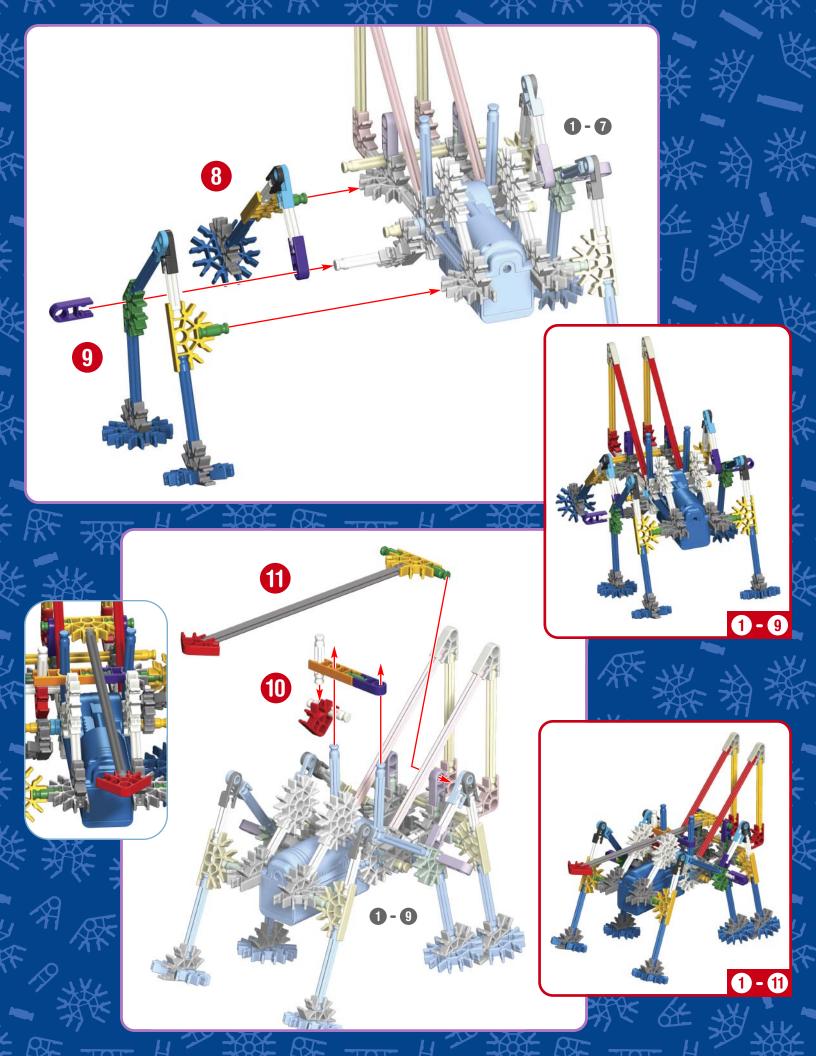

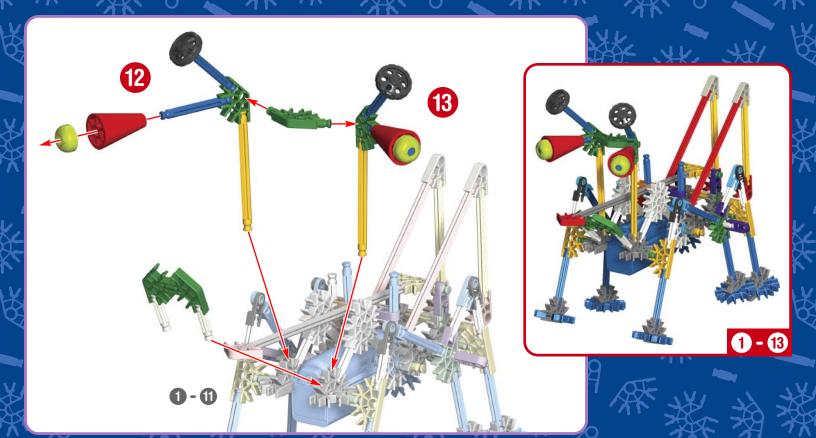

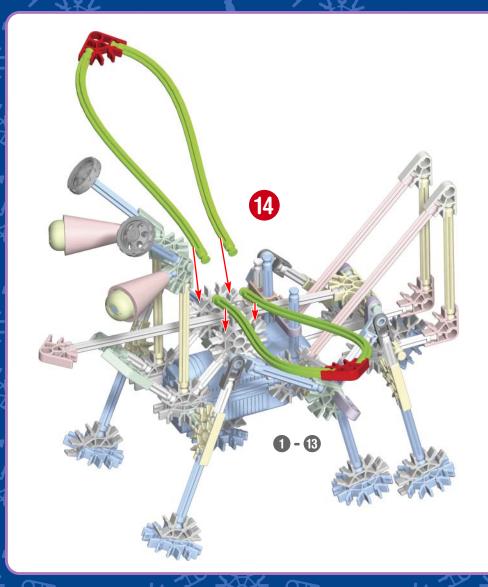



Visit our Web site at: www.knexeducation.com

E-mail us at: abcknex@knex.com

Telephone us at: 1-888-ABC-KNEX (English Only) Monday-Friday 8:30am-5:00pm EST

Write to us at:
K'NEX Education
P.O. Box 700
Hatfield, PA 19440-0700

©2010 K'NEX Limited Partnership Group.
K'NEX and K'NEX Education are registered trademarks of K'NEX Limited Partnership Group.